

Petr Provazník-čárové lasery

Němčany 186 684 01 Slavkov u Brna Čzech Republic Tel: +420 607 865 724 Fax: +420 544 221 154

E-mail: <u>provaznik@carove-lasery.cz</u>
Web and schoping: <u>www.carove-lasery.cz</u>

Line Lasers

Petr Provazník – point lasers 10mW, 635nm with converter AC/DC – Technical and safety form

Lasers developed for marking cutting areas and planes in simple machines, NC systems, as well as in complex working systems.

What else can they serve for?

- used as an instrument to mark the spot of cutting for band, circular and rectilinear sawing machines,
- marking the cut of pneumatic shears and plate-cutting machines,
- marking the safe space at power presses,
- laying-out of a plane on construction works,
- plane marking at blow moulding of e.g. aircraft calottes on exhausters,
- punctuating road billboards and other firm signs,

Equipment description

The laser diode modulus includes a laser diode with optics for collimation of optical pencil to a laser beam, in the version for line forming the line optics. It includes a serve loop for laser diode infeed, a converter and a voltage rectifier. The modulus serves as a source of laser radiance in technical appliances with defined properties of the optical beam (see below).

Connection of the laser modulus

It concerns lasers without battery supplies. It is necessary to secure an elegtricity supply in the machine thalaser is installed on, or to feed the laser by means of a feeding adapter to the electricity socket. Connect the laser modulus to the voltage supply 6-30V AC/DC. By replacing the feeding voltage over the maximal value the laser will be destroyed! It does not matter how the the conductors will be connected. The modulus cannot be destroyed by the reversal of poles, it will function in both connections.

Laser modulus clamping

The laser can be clamped to our laser holders with a magnetic support or to a holder with a spherical joint. Then you have to set up the light exposure spot. You can also bolt the holder on into a tapped hole in the machine or. apparatus. If the laser should be working in conditions with high temperature (over 40°C), it is necessary to clamp the laser in a metallic holder provided with heat removal into the machine body or into another cooler, or at least to provide an air circuit with a ventilator. The laser optics itself has already been set up and cannot be reset without an intentional and forced damage (which means that the guarantee is no longer valid). Never let the laser shine in the eyes of people or animals, not even for a short time, or do not let it be reflected in the eyes when being used or switched on accidentally. The health risks are quoted below.

Instructions when used for the first time:

- Read thoroughly the safety instructions!
- Check the correct source voltage before switching it on. Wrong setting can destroy the modulus.
- Check if the laser could not shine to somebody's eyes.
- Check after 10 minutes working the running temperature. It should be appr. the same as in the room. The modulus with a converter warms only insignificanly. Overheating (over 44°C) is shown as beamweakening. If this happens, switch the laser off immediately and improve the cooling of the laser body. Mind this particularly in summer, the modulus should not be switched on when warmed up by sun. Then the laser would be irreversibly damaged, and for this there is no guarantee



Petr Provazník-čárové lasery

Němčany 186 684 01 Slavkov u Brna Čzech Republic Tel: +420 607 865 724 Fax: +420 544 221 154

E-mail: <u>provaznik@carove-lasery.cz</u>
Web and schoping: <u>www.carove-lasery.cz</u>

Line Lasers

Security warnings

Caution! The modulus contains a laser source Class 3B. Avoid hitting the eyes by a direct or reflected beam. Never look directly into the switched-on laser optics! Never observe the laser with binoculars! Danger of permanent eye damage! Prevent the access to children! For working with lasers, only persons over 18 are are qualified, after being instructed about the risks of this work.

Guarantee

A guarantee during 24 months following the delivery date is given to these laser moduli. Because of this, please do not remove the modulus labels. The guarantee is given for all defects, except of those caused by manipulation mistakes, by not respecting the instructions for the installation and operation, or caused through another than usual operation of the mechanism. The guarantee expires through an interference into the modulus construction or content. This is forbidden because of safety. The guarantee and after-guarantee service is provided by our firm *Petr Provazník* – *čárové lasery*.

Technical Specifications

- Minimal working distance 0.1 m, maximal about 10 m according to light conditions, except customer focusing
- Weight of point 2 mm/1 m (except customer's focusing for demanded distance)
- Optical/mechanic deviation max. 6.25 mrad from laser body axis
- Laser with 3B security class marking according to IEC 60825
- Laser output 10mW with wave length 635 nm
- Power takeoff max. 65mA according to feeding voltage
- Protection against polarity inversion
- Containing a rectifier and a voltage transformer
- Infeed max. 6mA to 30mA according to infeed voltage
- Coverage IP 65
- Circuitry separated in a galvanic way from framework by an electro insulating protection up to 400V
- No releasable parts
- Temperature limits 45°C, -15°C
- \bullet Max. temperature extent of the laser modulus $\,$ -12°C to 45°C, working off this range can cause damage
- The temperature when working can be about 2°C higher than the actual room temperature
- Dimension 16 mm x 90 mm, weight 20 g (without cable)
- Laser casing : duralumin (black eloxal coating)

The proposed safety and technical form is a result of our proffesional knowledge and practical experience. This information is coming out of our present know-how. It is presented in good trust and as an informative character. It is to be seen as a general quideline for solving factual situations and requirements for individual installations.